

GIGA01004 Deep Secret Remote Product Guide



What's Included


Panty Vibe
Remote
Warranty Card/Instructions
USB Charger for Panty Vibe
One 27A 12V Remote Battery

Operational Notes

10 Modes
Battery Included - 1 27A 12V
Panty Vibe is Waterproof
Remote is NOT Waterproof
Do not use silicone
lubricant with
silicone products
Remote works up to 25 ft.
away from panty vibe

1


Lift here

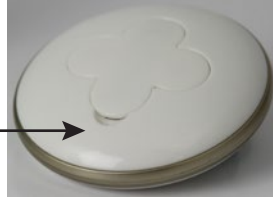

To insert battery, open plastic backing of the remote and insert with flat (-) side touching the spring. Replace backing.

2

Power Buttons

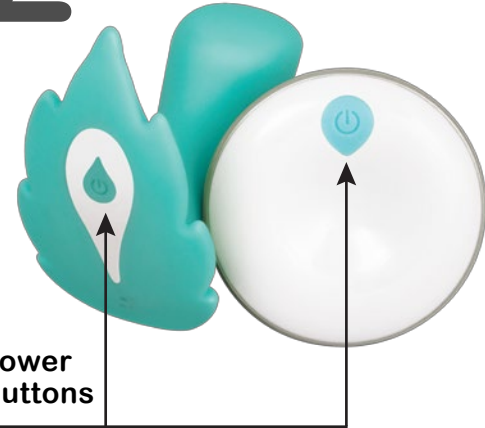


Turn both devices on by pressing the power buttons on each device for 3 seconds, starting with your already charged panty vibe. To connect the remote, press and hold power button after inserting battery. Power off by holding power button of either device.

3

Charge Port



The backlight of panty vibe will be blue when turned on and begin vibrations, but will not flash with vibration patterns. The 10 modes will cycle through and repeat. Switch modes by pressing the power button on the remote once for each pattern. Stop vibrations of panty vibe by holding power button on remote or the vibe.

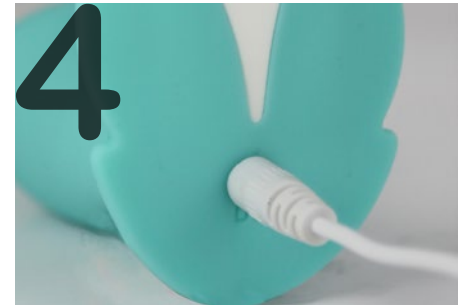

Charge panty vibe by locating the charge port at the back of the device. After connecting the USB cable to a power source, insert the other end of charger to the DC outlet. Press charging pin through silicone seal. This will not affect waterproof functionality of the panty vibe. Backlight will flash while charging.

NOTE: Panty vibe will remain on if vibrations are stopped via the remote.

