

GIGA01005 Dual Vibra Bullets 10x Product Guide



What's Included

Product

Warranty Card/Instructions

Operational Notes

10 Modes

Battery Operated - 2 AAA
(Not Included)

Bullets are Waterproof
Controller is Splashproof
Complete submersion
not recommended

Do not use silicone
lubricant with
silicone products



1



Power Button

Twist bottom of controller to open and insert the (2) AAA batteries. Press power button once to turn device on or off.

2



Insert batteries according to + and - signs on product. The positive side of the battery should be facing out on the + side and the negative or flat side of the battery should be facing out on the - side.

3

Switch Functions



Press the function button to cycle through the 10 modes. Light on controller near the buttons will change with vibration patterns.