



GIGA02002

# Orbital Wand 9x Product Guide

## What's Included

Product  
Warranty Card/Instructions  
USB Charger

## Operational Notes

9 Modes  
Rechargeable  
Waterproof - Submersible  
Do not use silicone  
lubricant with  
silicone products

1

Charge Port



Turn on/off device by holding power button for 3 seconds.

2

Power Button

Switch Functions



Switch between functions by pressing the power button and cycling through modes. Backlight will flash with vibration patterns. Once modes have cycled, the device will stop vibrations, but remain on. This is indicated by a solid blue backlight behind the power button.

3

Charge Port



Charge your device by locating the charging port on opposite side of the power button. After connecting the USB cable to a power source, insert the other end of charger into DC outlet. Press the charging pin through silicone seal. This will not affect waterproof functionality.



Backlight will flash blue while charging and stop when fully charged. Product will not turn on while charging.

