



GIGA04000 Twin Bliss Buzz 9x Product Guide

What's Included

Product

Warranty Card/Instructions

Operational Notes

9 Modes

Battery Operated - 2 AAA
(Not Included)


Splashproof - Complete
submersion not
recommended

Do not use silicone
lubricant with
silicone products

1

Twist bottom
of product
to open and
insert batteries.

Control
Pad

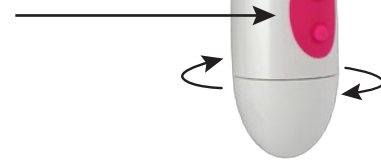

2




Insert batteries according to +
and - signs on product. The
positive side of the battery
should be facing out on the +
side and the negative or flat
side of the battery should be
facing out on the - side.

3

Switch
Functions

Power
Button

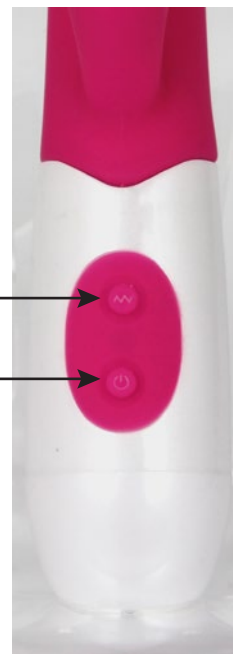

After inserting batteries and
replacing cap, press power
button once to power device
on/off. Switch between functions
by pressing the top button and
cycling through modes. Backlight
will flash with vibration patterns
indicated by a solid blue light
behind the control pad.

