



GIGA04001 Le Lavish Rabbit Product Guide

What's Included

Product

Warranty Card/Instructions

USB Charger

Operational Notes

10 Vibration modes

7 Rotation patterns with stimulation beads

Red light indicates device is on. Blue light indicates functions are active

Waterproof - Submersible

Do not use silicone lubricant with silicone products

1

Rotating Beads

Power Button




Press power once to turn device on. Press again to turn power off.

2

Bead Rotations

Stimulator Vibrations

Power Button

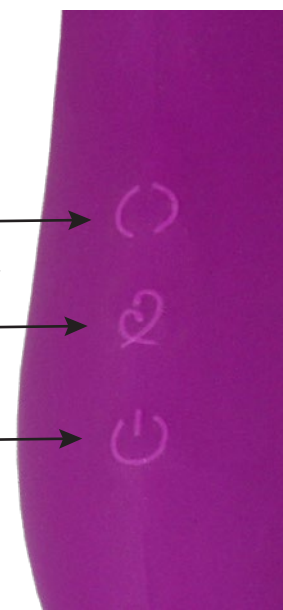

The top button switches the function of the rotating beads (7 modes) along the shaft. The middle button controls the 10 vibration patterns of the motor inside the clitoral stimulator.

3

Charge Port



Charge your toy by locating the charging port at the bottom of the device. After connecting the USB cable to an AC power source, insert the other end firmly into the DC outlet at a 45 degree angle. Press the charging pin through silicone seal. This will not affect waterproof functionality.

4



Device flashes when charging. When charged, a solid backlight should appear in red behind the power button. ONLY USE charger provided with device. Using other chargers may cause fault in toy and void warranty.

