



GIGA04002 Dual Contoura 10x Product Guide

What's Included

Product
Warranty Card/Instructions

Operational Notes

10 Modes


Battery Operated - 2 AAA
(Not Included)

Splashproof - Complete
submersion not
recommended

Do not use silicone
lubricant with
silicone products




Control
Pad

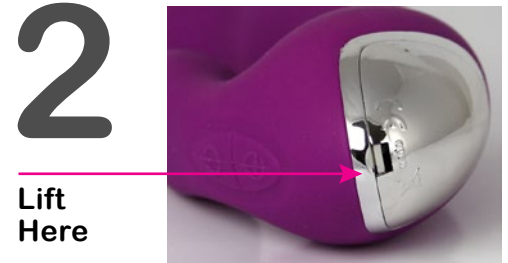

Lift
Here



Insert batteries according to + and - signs on product. The positive side of battery should be facing out on the + side and the negative or flat side of the battery should be facing out on the - side.

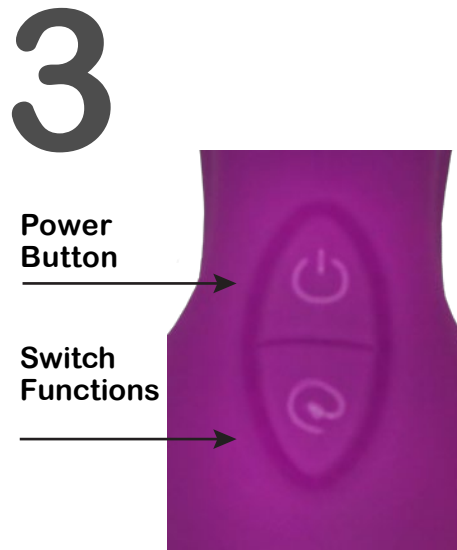

Power
Button

Switch
Functions

Press power button once after inserting batteries and snapping silver backing back into place to power on. Switch between functions by pressing the bottom button and cycling through modes. Backlight will flash with vibration patterns indicated by a red light behind buttons.

