



GIGA04003 Mr. Magic Ears 10x Product Guide

What's Included

Product

Warranty Card/Instructions

Operational Notes

10 Modes

Battery Operated - 1 AAA
(Not Included)

Splashproof - Complete
submersion not
recommended

Do not use silicone
lubricant with
silicone products

1



Twist bottom of product
between silicone and
plastic parts to open
and insert batteries.

Power/Function
Button

2



Insert (1) AAA battery with the - side of the battery facing out towards you. After inserting batteries and replacing cap, press power button once to power on your device.

3



This will start the cycle of vibration patterns. Press and hold power button for 3 seconds minimum in any function to turn device off.

Switch Functions

