



# GIGA04005 Vega Duplex 7x Product Guide

## What's Included

- Product
- Warranty Card/Instructions
- USB Charger

## Operational Notes


- 7 Modes
- Rechargeable
- Waterproof - Submersible
- Do not use silicone lubricant with silicone products

# 1



Power Button

# 2

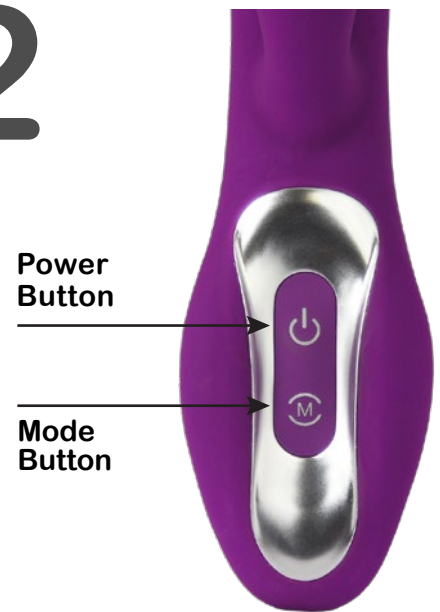

Power Button

Mode Button

Press and hold power button for 3 seconds to turn device on/off.


Switch functions by pressing the power button after turning device on to alternate between functions that control the clitoral stimulator. To change functions of the shaft, press the mode button.

# 3



Charge Port

# 4

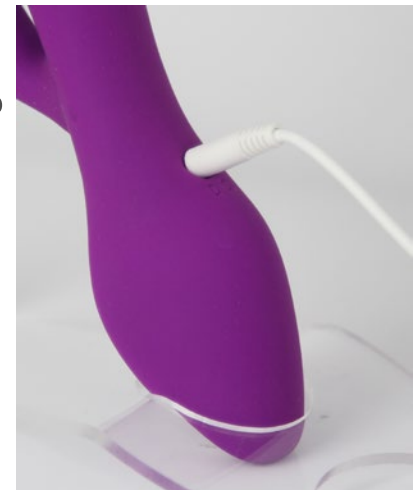

Locate the charge port at the back of the device and connect the USB cable to a power source. Insert the other end of the charger to the DC outlet. Press charging pin through silicone seal. This will not affect waterproof functionality.

Backlight will flash while charging and remain solid when fully charged and plugged in. Backlight will change with the shaft vibration modes, but remain solid if only the clitoral stimulator modes are changed.

